



• Stock for sale  
or exchange

• Large inventory  
– FAA Certified



Part Number	Description
<b>Avionics</b>	
39205-00-01	SECONDARY FLIGHT DISPLAY
4066010-910	TCAS II PROCESSOR
7000700-668	AIR DATA COMPUTER RVSM
7005819-707	EFIS CONTROL
7011345-901	INSTRUMENT REMOTE CONTROLLER
7011702-915	FLIGHT GUIDANCE COMPUTER
724866-808BK	MAGNASTAR HANDSET AND BASE
9000000-86008	TAWS+ COMPUTER
990-2827-001	INTERPHONE AMP
AI-EQ1	EQUALIZER
AI-STR-01-A	CONTROLLER
<b>Electrical</b>	
100-0540-04	EMERGENCY BATTERY ASSEMBLY
100-1600-04	STATIC INVERTER, 1500 VA
1703-12	SENSOR, STALL
23080-005	STARTER GENERATOR
23080-064	STARTER GENERATOR
25-8NF157-7511A	PANEL WIRE ASSEMBLY
51509-006C	GENERATOR CONTROL UNIT
51539-006H	GENERATOR CONTROL UNIT
5400612-1	T/R RELAY BOX
651-5867-9	PANEL ASSEMBLY - APU CONTROL
A-1074C	CONTACTOR
A703FS	CONTACTOR
A703FSS	CONTACTOR
A848MAS	CONTACTOR, START
BA02801-1	ALTERNATOR, WS HEAT
C87705-4	AOA COMPUTER
C-87706-1	SIGNAL SUMMING AMP
CB02701	GENERATOR CONTROL UNIT
LDA200B18C	CONTACTOR, INVERTER
PC-250	STATIC INVERTER W/MOD C

Part Number	Description
SD-130L	CONTACTOR
SPS1607	STATIC INVERTER
XA9511E003-3	TKS PUMP
XA9511E009	DE-ICING PUMP ASSEMBLY
<b>Environmental</b>	
0901-2	BLOWER
102466-13	REGULATOR, AIR PRESS
102466-5	REGULATOR, AIR PRESS
103278-13	VALVE, OUTFLOW
103278-18	VALVE, OUTFLOW
104968	VALVE, REFRIG BYPASS
106884-3-1	VALVE, FLOW CONTROL
107312-4-1	PNEUMATIC RELAY
1092TH100-47	AIR VALVE ACTUATOR
109812-9-1	VALVE, BUTTERFLY SHUT OFF
1150642-3	SENSOR
130530-4	PRESSURE CONTROLLER
130530-5	PRESSURE CONTROLLER
131150-1-1	EJECTOR
132322-3-1	VENTURI FAN
175050	WATER SEPARATOR
2205490-3	COOLING TURBINE
2340594-4	HEAT EXCHANGER
321262-1	VALVE
3213788-1-1	BLEED AIR MIXER VALVE
3213788-3	BLEED AIR MIXER VALVE
3215086-3	PRESS REG VALVE
321776-1-1	BYPASS VALVE
34988-2	ACTUATOR, ROTARY
45C3-111	BLOWER, CABIN RECIRC
617452-4	CONTROL, CABIN TEMPERATURE
978836-5-1	VALVE
K39117-1	VALVE, BARO CONTROL
25-8PT463-1A	VENTRAL TANK
S25-8UM6	PLUNGER TUBE

Part Number	Description
<b>Fire &amp; Ice</b>	
08301-1	DE-ICER TANK
182A	FIRE EXTINGUISHER WITHOUT SQUIBB
25-8KT1-129	PANEL TKS DISTRIBUTOR
25-8WS1513-68	PANEL-DISTRIBUTER, RH ONLY
30402104	FIRE EXTINGUISHER WITH SQUIBBS
4190-01	EXTINGUISHER APU W/ SQUIB
<b>Flight Controls</b>	
25-8CW159AB	FLAP SCREWJACK, LH
25-8CW159AC	FLAP SCREWJACK, LH
25-8CW161AB	FLAP SCREWJACK, RH
25-8CW161AC	FLAP SCREWJACK, RH
25-8TE1-2A	ELEVATOR STARBOARD
25-8TF513-1A	STABILIZER ASSY - VERTICAL UPPER
25-8WB9-1A	AIRBRAKE ASSY, TOP LH
25-8WB9-2A	AIRBRAKE ASSY, TOP RH
25-8WF251-1A	FLAP ASSEMBLY, PORT
25-8WF251-2A	FLAP ASSEMBLY, STARBOARD
25-8WF3-169A	FLAP ASSEMBLY
614MK2	FLAP CONTROL
617MK4	FLAP POSITION
AC67214	RUDDER BIAS STRUT
ACA1218	STRUT, RUDDER BIAS
AIR46520-1	JACK, AIRBRAKE LH
AIR46520-2	JACK, AIRBRAKE LH
AIR46521-1	JACK, AIRBRAKE RH
AIR46521-2	JACK, AIRBRAKE RH
S25-7WB50001AB	AIRBRAKE ASSY, LOWER LH
S25-7WB50002AB	AIRBRAKE ASSY, LOWER RH
<b>Fuel</b>	
0204KTU/5	TANK UNIT
0204KTU2	FUEL PROBE
0204KTU4	FUEL PROBE
0204KTU6	FUEL PROBE

Part Number	Description
0204KTU7	TANK UNIT
131358-3	TANK, AUX VOLUME
3070800-35	FUEL CONTROL UNIT
HTE1984-1	FUEL SHUTOFF VALVE
HTE9044-001	ACTUATOR
HTE9596-1	VALVE, MASTER REFUELING
<b>Hydraulics</b>	
088424001	HYDRAULIC ACCUMULATOR
150T283	SENSOR, HYD OVERHEAT
42022-03	PUMP, HYDRAULIC
61P64HN2	SOLENOID VALVE
ACM22740	BRAKE MODULATOR
ACM22742	MODULATOR ASSY - RH
ACM26274	MASTER CYLINDER
AIR45424-0	HAND PUMP
AIR45574-4	ACCUMULATOR, HYDRAULIC
<b>Instrumentation</b>	
0107KPU1	PROCESSOR
2121-1-13	INDICATOR, OIL TEMPERATURE
2121-1-14	OIL PRESS INDICATOR
2132-1-11	INDICATOR, FLAP POS
2132-1-62	AMMETER
501-1656-02	ATTITUDE DISPLACEMENT INDICATOR
696-1-13	INDICATOR, BRAKE PRESSURE
8047-10	ALTIMETER
9-328-26	FUEL FLOW/FUEL USED INDICATOR
MS28061-T7	GAUGE HYDRAULIC PRESS
SLZ7681	INDICATOR, AOA
WL1901KID1	FUEL QUANTITY INDICATOR
WL656RSA7	RPM INDICATOR
WL717RSA3	INDICATOR, N1
WL717RSA5	N1 GAUGE
<b>Landing Gear</b>	
25-8UN3-143A	DRAG STAY ASSY
25UM357AC	AXLE MLG
25UM358AF	AXLE RH MLG

Part Number	Description
AC65216	MAXARET
AC65218	MAXARET
AC67732	BRAKE CONTROL VALVE
ACM30946	MASTER CYLINDER
AHA1897	BRAKE ASSEMBLY
AIR45396-5	STEERING JACK
AIR45396-7	STEERING JACK
AIR48502/3	ACTUATOR
RFS-1897K	HOT PAC KIT
TP42000	BRAKE PRESSURE SWITCH
TP42001	BRAKE PRESSURE SWITCH
<b>Lighting</b>	
00033190-115	LIGHT ASSEMBLY
00033190-116	LIGHT ASSEMBLY
01-0790044-54	BEACON
25-8WS1613-16A	NAV LIGHT LENS
30-0538-7	WING POSITION LIGHT
<b>Oxygen</b>	
176531-35	OXYGEN CYLINDER
MC10-14-101	MASK, CREW OXYGEN
MC10-14-124	MASK, CREW OXYGEN
MC10-14-21	MASK, CREW OXYGEN
MF10-03-02	MASK, CREW OXYGEN
WKA35964-1	SHUT-OFF VALVE
WKA37447	OXYGEN CYLINDER
<b>Pneumatic</b>	
321292-1	SHUT OFF VALVE
AC61518	VALVE, REDUCING
PAS129-163	REDUCING VALVE
<b>Powerplant</b>	
2118330-2	ECU
2118756-1	SYNC/APR
540158-4-2	ACTUATOR
5451101-79	LH AFTERBODY
5453001-1	THRUST REVERSER LH
5453001-2	THRUST REVERSER RH
5453305-3	RETARD ASSY-THROTTLE
5453511-1	FAN FLAP ACTUATOR

Part Number	Description
5453511-11	FAN FLAP ACTUATOR
5453512-19	ACTUATOR ASSEMBLY, TR
C46BM10100-5	MOUNTING
C46BM10100-6	MOUNTING
HS7830100-3	THRUST REVERSER
HS7830100-4	THRUST REVERSER
<b>Structures</b>	
140-1701-3	AILERON - WINGLET APPLICATION
25-8CT219-139A	MOUNTING ASSY-ELEVATOR TRIM SERVOMOTOR
25-8GF-227-1A	REAR CONE
25-8UD43-116A	FAIRING ASSEMBLY
25-8UD505-1A	LH MAIN GEAR DOOR ASSY
25-8UD505-2A	RH MAIN GEAR DOOR ASSY
25-8UD63-1A	NOSE DOOR ASSY, REAR
25-8WF3-170A	FLAP ASSEMBLY
25-8WG1-117A	AILERON AND TAB, LH
25-8WG1-118A	AILERON AND TAB, RH
25TR209AG	RUDDER TAB
5451101-81	RH AFTERBODY
C46B11000-21	INLET LH
C46B11000-22	INLET RH
C46B12000-6	COWL
C46B12000-7	AFT COWL
C46B12000-8	AFT COWL
C46B14000-3	PANEL ASSY-UPPER LH ONLY
C46B14000-4	PANEL ASSY-UPPER RH ONLY
C46B14100-47	SKIN-UPPER COWL
C46B15000-21	COWL DOOR LH
C46B15000-23	COWL DOOR RH
C46B15000-5	INLET COWL, LH
C46B15000-7	COWL DOOR RH
F10A5B10204-55	PANEL ASSY, UP COWL
F10A5B10204-57	PANEL ASSY, UP COWL
S25-8UM50010A	RH GEAR FAIRING ASSY, WHITE