




Your King Air

• Stock for sale or exchange

parts superstore

• Large inventory – FAA Certified

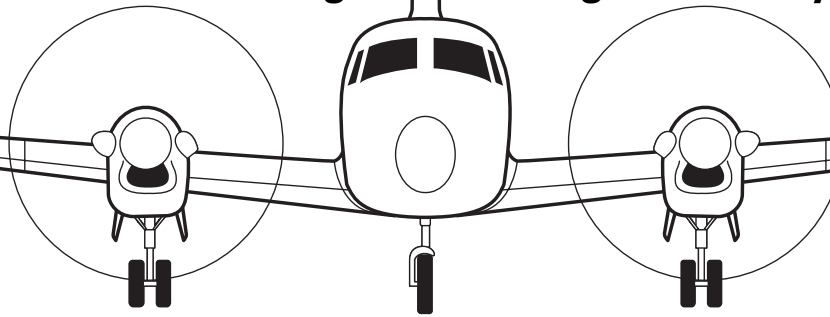

Avionics Information for King Air

Part Number	Description
Electrical & Lighting	
23048-016, 018	Starter Generator
23078-019	Starter Generator
23079-000-1	Starter Generator
23085-001	Starter Generator
30-1012-5	Nav Strobe Light
30-1329-3M, -4M, -5M, -6M	Nav Strobe Light
30-1331-5	Nav Strobe Light
51530-001A, -007B	Generator Control Unit
51538-001A	Generator Control Unit
60-1750-3	Power Supply
701571	Power Supply
LT-52A	Dimmer
MC815AS-1	Controller
Environmental & Pneumatics	
10009A	Evaporator
10010A	Evaporator
100-384072-5	A/C Compressor Motor
103648-1, -4, -5, -7, -13	Outflow Valve
1131325	A/C Compressor Motor
130346-1, -11, -12	Pressurization Control
130398-2	Pressurization Control
130440-3	Limit Controller
130-364090-5	A/C Module
1520T100-2, -10, -12, -14	Pneumostat
1520T100-109, -111, -113, -115	Flow Pack
1925-00-3	Pressure Regulator
1H75-12, -13, -5	Pressure Regulator
1H98-2	Electronic Flow Pack
4706-33	Bleed Air Valve

Part Number	Description
Environmental & Pneumatics continued	
AI-BA128A-1	Blower Assembly
BC89A-1	Blower Assembly
EM603-7, -9	Blower Assembly
EM609-3, -4, -6	Blower Assembly
EM640-1	Blower Assembly
EM651-1	Blower Assembly
F7-51-3	Electronic Flow Control
F7-51-5	Electronic Flow Control
HYLZ50336-1	Temp Controller
Fire & Ice	
101-384025-23, -24	Windshield LH/ RH
1532-3C	Distribution Valve
30100023	Fire Bottle
30301102	Fire Bottle
38E97-2A	De-ice Valve
861-006	Fire Bottle
EM418	Ice Vane Actuator
EM450-5	Ice Vane Actuator
Flight Control	
100-524073-1	Flap Motor & Gearbox
101-500047-17, -19, -21	Elevator Servo
101-521016-1, -2	Flap Actuator
101-524887-605	Trim Tab Actuator & Control
1136T100-23	Horizontal Stabilizer Actuator
129-521050-1, -2	Flap Actuator
129-521051-1, -2	Flap Actuator
199-7.4-1	Rudder Boost Servo
3601-8	Stall Computer
3701-14, -2	Lift Transducer
50-521222-3, -4	LH/RH Flap Actuator

Part Number	Description
Flight Control continued	
50-521223-3, -4	LH/RH Flap Actuator
50-524161-606, -607	LH/RH Trim Tab Actuator
FS36-1	Flap Motor & Gearbox
Fuel & Powerplant	
025323-300-03	Fuel Pump
10021A	Cooler
101-389028-3	Oil Cooler
10-381550-4	Ignition Exciter
10525K	Oil to Fuel Heater
150-906-002	Fuel Flow Transmitter
1C12-1	Boost Pump
1D2-12	Boost Pump
210528	Prop Governor
210638	Overspeed Governor
25536-4	Flow Divider
26035-1	Flow Divider
3100829-03	Bleed Valve
3100922-05	Bleed Valve
3117032-01	Bleed Valve
3123122-01	Bleed Valve
3123123-01	Bleed Valve
3244707-8-7	Torque Limiter
3244768-13	Fuel Control Unit
3702-1	Actuator
4706-24	Bleed Air Shutoff Valve
50-389057-1	Tach Generator
5485-020	Synch Actuator
6852-920	Synch Control Box
76-174-1, -8	Fuel Probe
8061-333	Fuel Control Unit
8063-007	Fuel Control Unit
8210-002-01	Prop Governor




Part Number	Description
Fuel & Powerplant continued	
8210-003-01	Prop Governor
8210-007-01	Prop Governor
8210-024-01	Prop Governor
8210-025-01	Prop Governor
8546949	Oil Cooler
A213796	Synch Control Box
AV16B1700B	Shutoff Valve
B210631	Overspeed Governor
EM2081-13A	Fuel Level Sensor
EM2122-2	Fuel Level Sensor
EM424-8, -9	Shutoff Valve
Instrumentation	
100-0034-04	Prop Tach Indicator
100-384079-3	Prop Tach Indicator
101450-11952	Dual Scale Altimeter
1U149-001-6	Horizon Gyro
267-901-003, -006, -008	Fuel Quantity Indicator
267-917-001, -003	Fuel Flow Indicator
2800(6930N1L)	Turn & Bank Indicator
300-903-006	Fuel Quantity Indicator
3571262-7303	Prop Tach Indicator
41-303-1	Prop Tach Indicator
41-305-1	Prop Tach Indicator
41-325-1	Prop Tach Indicator
41-326-1	Prop Tach Indicator
41-401-1	ITT Indicator
43-201-1	Torque Indicator
43-202-1	Torque Indicator
43-203-1	Torque Indicator
43-222-2	Torque Indicator
43-302-1	Turbine Tach Indicator
43-303-1	Turbine Tach Indicator
43-307-1	Turbine Tach Indicator

Part Number	Description
Instrumentation continued	
43-223-2	Torque Indicator
50-380034-3	Turbine Tach Indicator
50-380035-5	Prop Tach Indicator
5035P-P46	Encoding Altimeter
521372	Oil Temp & Press. Indicator
5610-05	Prop Tach Indicator
562-805	Volt Load Meter
81-101-5	Fuel Quantity Indicator
81-208-1	Fuel Quantity Indicator
83-124-1	Fuel Flow Indicator
8DJ81AAP1	Prop Tach Indicator
8DJ81BLB4	Prop Tach Indicator
8DJ81WBA4	Turbine Tach Indicator
90-380037-1	Fuel Flow Indicator
9550BN577	Turn & Bank Indicator
B365-5	Prop Tach Indicator
B366-3	Turbine Tach Indicator
MB801-28	Chronometer
MD106-9	Volt Load Meter
MD117-1	Volt Load Meter
SR-2AM	Torque Indicator
SRL-C2C	Torque Indicator
SRL-C2F	Torque Indicator
ST-502H-1	Torque Transmitter
ST-502J-1	Torque Transmitter
ST502K-1	Torque Transmitter
ST-504AB-1	Oil Pressure Transmitter
Landing Gear	
101-384137-5	Landing Gear Control
101-388014-17, -19	MLG Retract Cylinder Assembly
101-8002-3	Brake Assembly
115-811020-17, -613, -615, -653	Gearbox

Part Number	Description
Landing Gear continued	
2-1574	Brake Assembly
2-1576	Brake Assembly
25700-22	Nose Gear Actuator
27-15	Landing Gear Motor
30-162	Brake Assembly
37100-4	Accumulator
40-6	Hydraulic Pump Motor
45600-2, -3	Main Gear Actuator
50-810037-615, -616	Drag Leg Brace
50-810164-17, -18	LH/RH Main Gear Actuator
50-810335-13, -17	MLG Drag Leg Assembly
50-820004-3	Shimmy Damper
50-820034-19	Link Assembly
50-820208-5	Nose Gear Actuator
99-810057-651, -652, -653, -654	Main Gear Actuator
A4503M12-1	Gear Control
A4503M12-2	Gear Control
A4503M9-5	Gear Control
EM2090-1	Hydraulic Level Sensor
EM2098-1	Hydraulic Level Sensor
Oxygen	
101-384200-5	Oxygen Cylinder w/ Regulator
176401-77	Oxygen Bottle
176419-77	Oxygen Bottle
4401-1, -5	Oxygen Shutoff Valve
4402-1, -2	Oxygen Shutoff Valve
800114-01	Oxygen Regulator
801292-01	Oxygen Regulator
801765-00	Oxygen Regulator
MC10-02-05, -104, -105	Oxygen Mask
MC10-15-18	Oxygen Mask
MF20-001	Oxygen Mask

PN: 8210-025-01

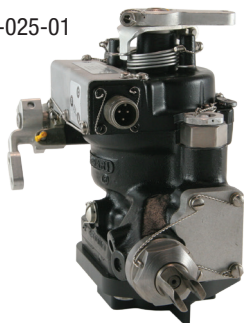

PN: 103648-6



PN: MC10-02-105

