




• Stock for exchange

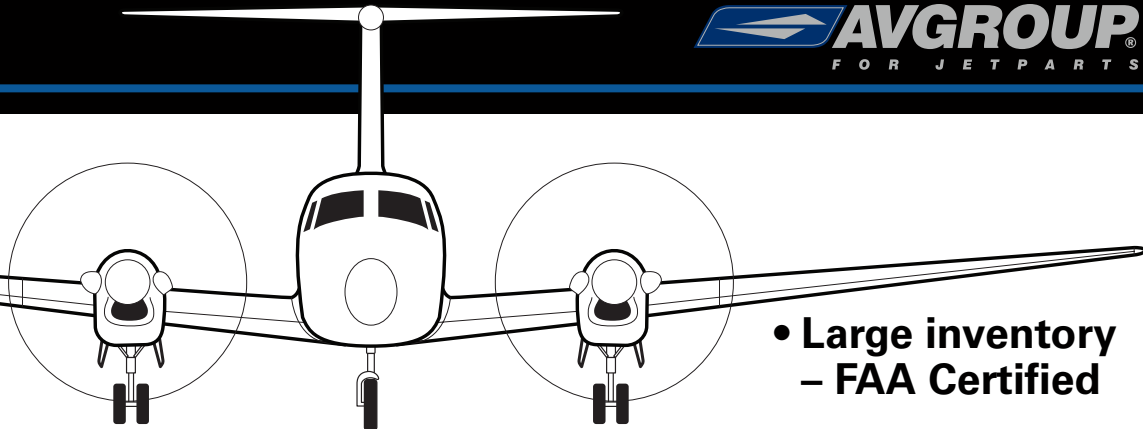

• Large inventory – FAA Certified

Part Number	Description
-------------	-------------

Avionics	
----------	--

23-501-016-1	GYRO HORIZON, 5000B-33
--------------	------------------------

Electrical	
------------	--

23079-000-1	STARTER GENERATOR
-------------	-------------------

117-364059-1	FUEL XFER PC BOARD
--------------	--------------------

23048-016	STARTER GENERATOR, WET SPLINE
-----------	-------------------------------

23048-016	STARTER GENERATOR, WET SPLINE
-----------	-------------------------------

23048-016	STARTER GENERATOR, WET SPLINE
-----------	-------------------------------

PC-17A	STATIC INVERTER
--------	-----------------

PC-17A	STATIC INVERTER
--------	-----------------

23085-001	STARTER GENERATOR
-----------	-------------------

23085-001	STARTER GENERATOR
-----------	-------------------

23085-001	STARTER GENERATOR
-----------	-------------------

23085-001	STARTER GENERATOR
-----------	-------------------

51530-007B	GENERATOR CONTROL UNIT
------------	------------------------

51530-007B	GENERATOR CONTROL UNIT
------------	------------------------

101-364572-17	PC BOARD
---------------	----------

101-364715-1	PC BOARD
--------------	----------

101-364715-1	PC BOARD
--------------	----------

MC815AS-1	MOTOR CONTROLLER
-----------	------------------

Environmental	
---------------	--

103648-4	OUTFLOW VALVE
----------	---------------

103648-4	OUTFLOW VALVE
----------	---------------

103648-7	OUTFLOW VALVE
----------	---------------

103648-7	OUTFLOW VALVE
----------	---------------

130346-11	CONTROLLER, PRESSURIZATION
-----------	----------------------------

130346-11	CONTROLLER, PRESSURIZATION
-----------	----------------------------

1520T100-109	FLOW PACK
--------------	-----------

EM603-7	BLOWER ASSY
---------	-------------

103648-13	OUTFLOW VALVE
-----------	---------------

103648-17	OUTFLOW VALVE
-----------	---------------

103648-18	OUTFLOW VALVE
-----------	---------------

103648-18	OUTFLOW VALVE
-----------	---------------

103648-18	OUTFLOW VALVE
-----------	---------------

Part Number	Description
-------------	-------------

103648-18	OUTFLOW VALVE
-----------	---------------

BC89A-1	BLOWER ASSY.
---------	--------------

BC89A-1	BLOWER ASSY.
---------	--------------

BC89A-1	BLOWER ASSY.
---------	--------------

130346-1	CONTROLLER, PRESSURIZATION
----------	----------------------------

130346-1	CONTROLLER, PRESSURIZATION
----------	----------------------------

10010A	EVAPORATOR
--------	------------

101-550087-25	VALVE ASSY RH, BYPASS, ENVIRONMENT BLEED AIR
---------------	--

103648-15	SAFETY VALVE
-----------	--------------

130368-15	CONTROLLER, CABIN PRESSURE
-----------	----------------------------

130368-15	CONTROLLER, CABIN PRESSURE
-----------	----------------------------

130398-2	CONTROLLER, PRESSURIZATION
----------	----------------------------

130398-2	CONTROLLER, PRESSURIZATION
----------	----------------------------

1520T100-10	PNEUMOSTAT
-------------	------------

1520T100-10	PNEUMOSTAT
-------------	------------

1520T100-10	PNEUMOSTAT
-------------	------------

1520T100-111	FLOW PACK
--------------	-----------

1520T100-113	FLOW PACK
--------------	-----------

1520T100-113	FLOW PACK
--------------	-----------

1520T100-113	FLOW PACK
--------------	-----------

1520T100-113	FLOW PACK
--------------	-----------

1520T100-12	PNEUMOSTAT
-------------	------------

1520T100-14	PNEUMOSTAT
-------------	------------

1520T100-14	PNEUMOSTAT
-------------	------------

EM2091-6	CONTROLLER, MOTOR
----------	-------------------

EM609-3	BLOWER ASSEMBLY
---------	-----------------

EM609-3	BLOWER ASSEMBLY
---------	-----------------

EM609-3	BLOWER ASSEMBLY
---------	-----------------

HYLZ50336-1	CABIN TEMPERATURE CONTROL
-------------	---------------------------

HYLZ50336-1	CABIN TEMPERATURE CONTROL
-------------	---------------------------

HYLZ50336-1	CABIN TEMPERATURE CONTROL
-------------	---------------------------

Fire & Ice	
------------	--

EM450-5	ACTUATOR, ICE VANE
---------	--------------------

EM450-5	ACTUATOR, ICE VANE
---------	--------------------

EM450-5	ACTUATOR, ICE VANE
---------	--------------------

Part Number	Description
-------------	-------------

38E97-2A	DEICE VALVE
----------	-------------

38E97-2A	DEICE VALVE
----------	-------------

1532-10C	DISTRIBUTION VALVE
----------	--------------------

1532-10C	DISTRIBUTION VALVE
----------	--------------------

1532-10C	DISTRIBUTION VALVE
----------	--------------------

Flight Controls	
-----------------	--

101-524079-3	ACTUATOR, TRIM TAB
--------------	--------------------

101-524079-3	ACTUATOR, TRIM TAB
--------------	--------------------

622-0965-003	TRIM SERVO
--------------	------------

622-0965-003	TRIM SERVO
--------------	------------

7002260-703	SERVO DRIVE
-------------	-------------

50-521223-3	OUTBOARD LH FLAP ACTUATOR
-------------	---------------------------

50-521223-3	OUTBOARD LH FLAP ACTUATOR
-------------	---------------------------

50-521223-4	OUTBOARD RH FLAP ACTUATOR
-------------	---------------------------

50-521223-4	OUTBOARD RH FLAP ACTUATOR
-------------	---------------------------

101-521016-1	FLAP ACTUATOR, LH INBOARD
--------------	---------------------------

101-521016-1	FLAP ACTUATOR, LH INBOARD
--------------	---------------------------

101-521016-2	FLAP ACTUATOR, RH INBOARD
--------------	---------------------------

101-521016-2	FLAP ACTUATOR, RH INBOARD
--------------	---------------------------

101-524072-1	TRIM ACTUATOR
--------------	---------------

101-524072-1	TRIM ACTUATOR
--------------	---------------

50-521222-3	FLAP ACTUATOR OUTBOARD LH
-------------	---------------------------

50-521222-3	FLAP ACTUATOR OUTBOARD LH
-------------	---------------------------

50-521222-4	FLAP ACTUATOR OUTBOARD RH
-------------	---------------------------

50-521222-4	FLAP ACTUATOR OUTBOARD RH
-------------	---------------------------

50-521222-4	FLAP ACTUATOR OUTBOARD RH
-------------	---------------------------

50-521222-4	FLAP ACTUATOR OUTBOARD RH
-------------	---------------------------

Fuel	
------	--

75-103-2	FUEL PROBE
----------	------------

75-103-2	FUEL PROBE
----------	------------

8061-333	FUEL CONTROL UNIT
----------	-------------------

8061-333	FUEL CONTROL UNIT
----------	-------------------

EM2081-13A	FUEL LEVEL SENSOR
------------	-------------------

EM2081-13A	FUEL LEVEL SENSOR
------------	-------------------

150-906-002	FUEL FLOW TRANSMITTER
-------------	-----------------------

150-906-002	FUEL FLOW TRANSMITTER
-------------	-----------------------

Call if you need a part that isn't listed as stock is updating weekly

Part Number	Description
150-906-002	FUEL FLOW TRANSMITTER
150-906-002	FUEL FLOW TRANSMITTER
150-906-002	FUEL FLOW TRANSMITTER
25536-4	FLOW DIVIDER
25536-4	FLOW DIVIDER
76-102-10	FUEL PROBE
76-174-1	FUEL PROBE
AV16B1700B	VALVE, SHUTOFF
Instrumentation	
522325	ITT INDICATOR
522325	ITT INDICATOR
24929-106	ALTIMETER, ENCODING
43-327-1	INDICATOR, TURBINE SPEED
201530-11344	INDICATOR, AIRSPEED
201530-11344	INDICATOR, AIRSPEED
3701-14	LIFT TRANSDUCER
83-124-1	FUEL FLOW INDICATOR
795-13	LIFT TRANSDUCER
MD117-1	LOAD METER
130-380039-3	AIRSPEED INDICATOR
1441-07	MAX AIRSPEED INDICATOR
267-901-003	FUEL QUANTITY INDICATOR
267-901-003	FUEL QUANTITY INDICATOR
267-917-001	FUEL FLOW INDICATOR
267-917-001	FUEL FLOW INDICATOR
41-404-1	INDICATOR, ITT
43-221-2	INDICATOR, TORQUE
43-221-2	INDICATOR, TORQUE
43-302-1	INDICATOR, TURBINE SPEED
43-304-1	INDICATOR, TURBINE SPEED
50-380034-3	TACHOMETER - TURBINE
50-380035-1	PROP TACH INDICATOR
50-380035-5	PROP TACH INDICATOR
50-380035-5	PROP TACH INDICATOR
509-0001-904	TURN AND SLIP
6900027-1	PROP. SYNCH INDICATOR
6900027-1	PROP. SYNCH INDICATOR
70002-1128	TURN & SLIP, LIGHTED, 28VDC
81-101-5	FUEL QUANTITY INDICATOR
81-101-5	FUEL QUANTITY INDICATOR
81-101-5	FUEL QUANTITY INDICATOR

Part Number	Description
81-101-5	FUEL QUANTITY INDICATOR
81-101-5	FUEL QUANTITY INDICATOR
83-282-1	ENGINE OIL TEMP IND
83-282-1	ENGINE OIL TEMP IND
83-283-1	OIL TEMP PRESSURE IND
86000-0177	CLOCK, 8 DAY, 24 HOUR
9550BN577	TURN & BANK LIGHTED
B366-3	TACHOMETER - TURBINE
B366-3	TACHOMETER - TURBINE
EM2090-1	SENSOR, HYD LEVEL
EM2090-1	SENSOR, HYD LEVEL
MD106-9	VOLT LOAD METER
MD106-9	VOLT LOAD METER
MD110-1	VOLT INDICATOR
RC30V10-1	IVSI
Landing Gear	
115-811020-615	GEARBOX & MOTOR ASSY, LANDING GEAR
115-811020-613	GEARBOX & MOTOR ASSY, LANDING GEAR
115-811020-613	GEARBOX & MOTOR ASSY, LANDING GEAR
45600-2	ACTUATOR, MAIN GEAR
45600-2	ACTUATOR, MAIN GEAR
A4503M9-5	CONTROL, LANDING GEAR
A4503M9-5	CONTROL, LANDING GEAR
50-810164-18	M/G ACTUATOR, RH
50-810164-18	M/G ACTUATOR, RH
50-810164-18	M/G ACTUATOR, RH
91-810010-7	GEARBOX LESS MOTOR
99-388002-15	POWER PACK
115-811020-17	GEARBOX, LANDING GEAR, W/O MOTOR
50-820004-3	SHIMMY DAMPENER ASSEMBLY
50-820208-5	ACTUATOR, NOSE LANDING GEAR
50-820208-5	ACTUATOR, NOSE LANDING GEAR
50-820208-5	ACTUATOR, NOSE LANDING GEAR
50-820208-5	ACTUATOR, NOSE LANDING GEAR
50-820208-5	ACTUATOR, NOSE LANDING GEAR
99-810057-651	ACTUATOR, MLG

Part Number	Description
99-810057-651	ACTUATOR, MLG
99-810057-651	ACTUATOR, MLG
99-810057-652	ACTUATOR, MLG
99-810057-652	ACTUATOR, MLG
99-810057-652	ACTUATOR, MLG
99-810057-652	ACTUATOR, MLG
99-810057-652	ACTUATOR, MLG
99-810057-652	ACTUATOR, MLG
99-810057-653	ACTUATOR, MLG
99-810057-653	ACTUATOR, MLG
99-810057-654	ACTUATOR, MLG
Lighting	
01-0790029-04	STROBE LIGHT
30-1329-3M	NAVIGATIONAL STROBE LIGHT
30-1329-5	NAVIGATIONAL STROBE LIGHT
30-1329-5M	NAVIGATIONAL STROBE LIGHT
30-1329-6M	NAVIGATIONAL STROBE LIGHT
30-1331-5	STROBE LIGHT
60-1750-3	POWER SUPPLY, STROBE
90033-13	STROBE
Oxygen	
4401-5	SHUTOFF VALVE
4401-5	SHUTOFF VALVE
172210	OXYGEN PRESSURE REGULATOR
172400-14	OXYGEN REGULATOR
Pneumatic	
38E85-2B	REGULATOR AND RELIEF VALVE
37100-4	ACCUMULATOR
37100-4	ACCUMULATOR
Powerplant	
10585K	HEATER, OIL TO FUEL
10585K	HEATER, OIL TO FUEL
210631	OVERSPEED GOVERNOR
210631	OVERSPEED GOVERNOR
210631	OVERSPEED GOVERNOR
4706-33	ENGINE BLEED AIR VALVE
4706-33	ENGINE BLEED AIR VALVE
4706-33	ENGINE BLEED AIR VALVE
8063-080	FUEL CONTROL
A213796	PROP SYNCROPHASER
A213796	PROP SYNCROPHASER